Easy Twist 6 in 1 Trike

Instruction manual

Welcome!

Thank you for purchasing the Puggle Easy Twist 6 in 1 Trike.

This instruction manual will guide you through the setup, use, and maintenance of your new trike, ensuring you get the most out of its versatile features. Please read through the following information and safety warnings carefully to fully understand and enjoy all the benefits your 6 in 1 Trike has to offer, and to ensure its safe operation.

We're here to help!

If you have a query with this product or require replacement parts, please contact us as the email address below.

Email: hello@thenurserystore.com

Follow us on social media:

- **f** Facebook
- Instagram
- YouTube
- TikTok
- X X (formerly known as Twitter)
- Pinterest

Important Information



IMPORTANT! Your 6 in 1 Trike may differ slightly from images shown above and throughout, as the images used are for illustration purposes only.

Your 6 in 1 Trike is tested to comply with EN 71.

- Bags and other items should not be hung from the handles as this can affect the stability of the product.
- DO NOT use parts or accessories which are not approved or supplied by the manufacturer.
- DO NOT allow your child to play with this product without adult supervision.
- Ensure that the basket is emptied and any accessories are removed prior to folding.
- A basket is provided for the carriage of items evenly distributed upto a maximum of kg.
- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this product.
- If a raincover is supplied, do not leave the raincover on indoors, in a hot atmosphere or near a heat source as your child may overheat.
- To prevent damage, remove the raincover before folding.
- Do not place anything on top of the raincover.

Safety Instructions

IMPORTANT - Read the instructions carefully before use and keep for future reference.

- **WARNING:** A child's safety is your responsibility.
- **WARNING:** Adult assembly is required.
- **WARNING:** Ensure that all components are fitted securely into place and tightened where applicable before allowing your child to play with the 6 in 1 trike.
- **WARNING:** Ensure that the child is supervised by an adult when using the 6 in 1 trike at all times, and is taught about the correct usage of the product.
- **WARNING:** Ensure that all locking devices are engaged before usage.
- **WARNING:** This product is suitable for use by one child at a time only.
- **WARNING:** DO NOT overload this product, maximum capacity is 25kg.
- Approximate age range is 9 months to 5 years.
- **WARNING:** Keep hands and other limbs away from moving parts such as the wheel to prevent entrapment and injury.
- **WARNING:** Protective equipment should be worn. Children should wear approved protective equipment e.g. helmet and correct fitting is required.
- **WARNING:** DO NOT allow a child to ride on roadways, public highways or alleys. Not to be used in traffic.
- **WARNING:** DO NOT allow a child to ride on steeply sloped areas, near steps, swimming pools, or other bodies of water.
- For use on smooth, paved surfaces only.
- Ensure that the rider keeps both hands on the handlebar at all time for proper control.
- **WARNING:** DO NOT allow a child to ride the product at dusk, at night or at times of limited visibility.
- Children should be reminded that the toy should be used with caution, since it requires skill, so as to avoid falls or collision causing injury to the user and third parties. They should also be reminded of the dangers of using this product on public highways.
- All assembly fittings should always be tightened properly, checked periodically and the care should be taken that no bolts are loose, because a child could trap parts of the body or clothing (e.g. strings, necklaces, ribbons for babies' dummies), which could pose a risk of suffocation and strangulation.
- Replace broken or worn parts immediately, only use parts supplied or approved by the manufacturer.
- This 6 in 1 Trike conforms to BS EN 71.

Symbols and their meaning

There are a number of symbols used through this manual, please find below breakdown of what each symbol is and what it means.

CE	European conformity – This mark is applied to both physical product and product packaging, indicating conformity with the relevant European testing standards.
UK	UK Conformity Assessed – This mark is applied to both physical product and product packaging, indicating conformity with the relevant UKSI testing standards.
	Direction indicator showing direction of assembly, rotation, function.

What's in the box

x1 Puggle Easy Twist 6 in 1 Trike

x1 Instruction Manual


Before Assembly

Before assembly, please ensure that you have read and understood the instructions. Then carefully unpack your Easy Twist 6 in 1 Trike and ensure that all parts are present, please see parts list as follows.

Discard packaging in accordance with your local authority guidelines.

The Easy Twist 6 in 1 Trike should be assembled on a clean surface, free from any sharp objects that could mark or damage the product.

CAUTION: There are many small components used in the construction of this folding travel trike. These items should be kept out of reach of young children whilst assembling the unit.

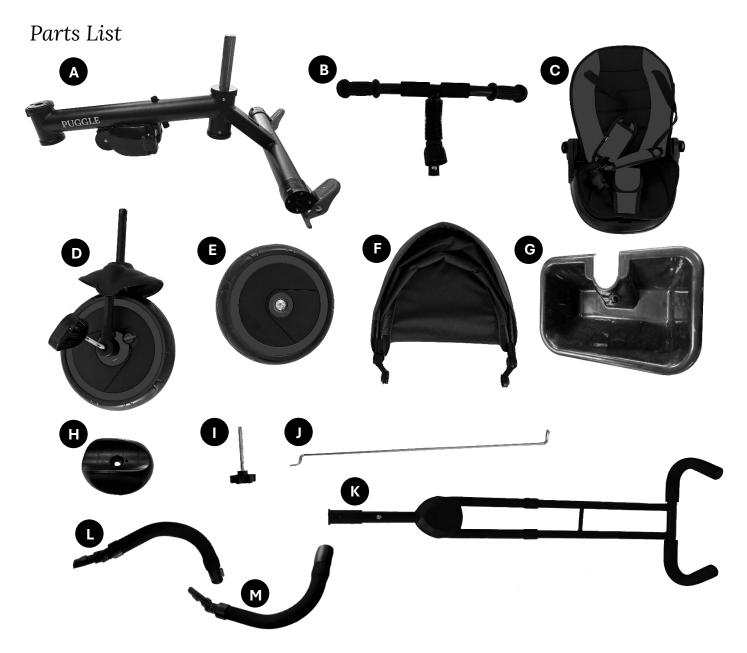

Parts included with your Easy Twist 6 in 1 Trike are:

Part	Description	Quantity	Part	Description	Quantity
A	Chassis/frame	1	Н	Seat Mount	1
В	Handlebar	1	I	Bolt	1
С	Seat	1	J	Steering Bar	1
D	Front Wheel	1	K	Parent Handle	1
E	Rear Wheel	2	L	Bumper Bar (Left	(2) 1
F	Canopy	1	M	Bumper Bar (Righ	nt) 1
G	Basket	1			

Assembling the Easy Twist 6 in 1 Trike

1. Insert both of the Rear Wheels (E) into the corresponding slots on the Chassis (A) as shown left, they will click into place.

Gently pull the Rear Wheel (E) to ensure that it is securely in place.

Note: To remove the Rear Wheels (E), press the release catch (image shown below right) on the Chassis (A) and pull the Rear Wheel (E) away from the Chassis (A).




2. Insert the Front Wheel (D) into the Chassis (A) until the end protrudes as shown left.

PUGGLE

3. Insert the Handlebar (B) onto the Front Wheel (D), ensuring that the nut and bolt are removed from the Handlebar (B). When the Handlebar (B) is fully on the Front Wheel (D), align the holes and then fix the nut and bolt to secure in place as shown below right.



4. When the pedals are not required the child can use the footrest, the footrest will be folded in to the Chassis (A) during transit. To release unfold the footrest as shown below in Fig. 1, then push the folding mechanism down as shown below in Fig. 2 and fold the footrest down as shown below in Fig. 3 into the open position (it will click to lock into place).

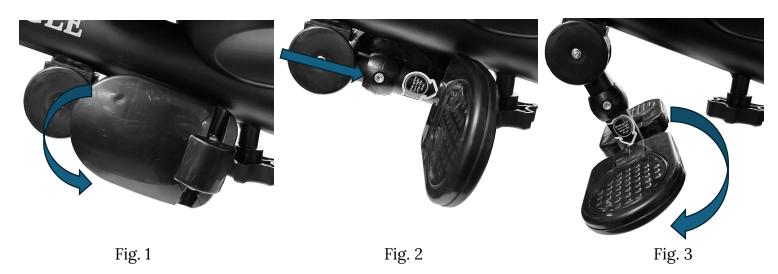

5. Insert the Steering bar (J) into the corresponding holes on both the Front Wheel (D) and the rear of the Chassis (A). Fix into place using the nuts on the Steering Bar (J) as shown below.

6. Sit the Seat Mount (H) onto the Chassis (A) as shown in Fig.4 below, sit the Seat (C) onto the Seat Mount (H) as shown in Fig.5 and then attach to Chassis (A) using the Bolt (I) as shown in Fig.6. Pull the Seat (C) from side to side to ensure that it is securely in place.


Note: To change the seat direction, unscrew and remove the Bolt (I). Replace the Seat (C) in the opposite direction on the Seat Mount (H) before tightening the Bolt (I) to secure in place.






. Attach the Canopy (F) to the Seat (C) as shown left by slotting the Canopy (F) into the corresponding slots on the Seat (C), it will click into place. Gently pull on the Canopy (F) to ensure it is securely in place.

8. Unfold the Canopy (F) as far as possible, however the fabric will not be taught as shown below in Fig. 7. To tighten locate the inner ribs of the Canopy (F) Fig. 8 and push the outwardly facing ribs on either side and it will click into place. The Canopy (F) should now be fully extended and taught as per Fig. 9

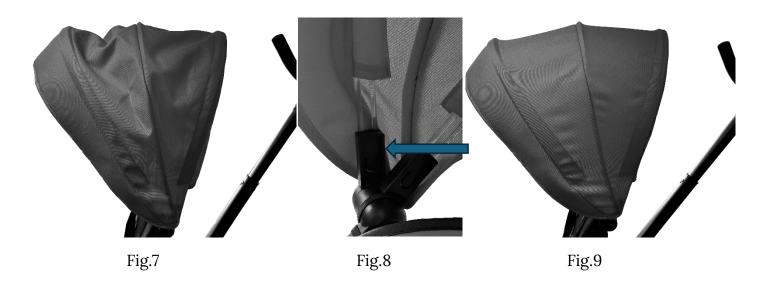

9. Attach the Basket (G) to the Chassis (A), by slotting the Basket (G) onto the metal of the Chassis (A) and ensure that it clicks into place.



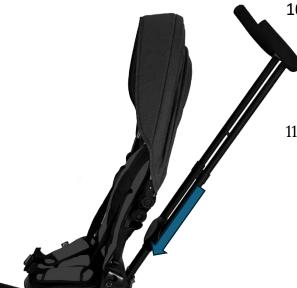

10. Attach the Parent Handle (K) to the protruding part on the rear of the Chassis (A) as shown left. It will click into place to indicate the spring pin is in place. Gently pull up on the Parent Handle (K) to ensure it is securely in place.

11. The Parent Handle (K) has 3 variable height positions, to adjust the height simply press the spring pin shown below and move up or down until the spring

pin locks into place.



Note: To remove the Parent Handle (K) simply lower the catch and ensure that the spring pin is recessed and lift the Parent Handle (K) up and away from the Chassis (A).

12. Attach the Bumper Bar R (M) to the Seat (C), by pushing the end with the spring pin into the corresponding hole on the Seat (C) as shown below in Fig.10. Push the Bumper Bar R (M) in until the spring pin clicks into place in the Seat (C) housing as per Fig.11 below. Slot the Bumper Bar R (M) through the centre of the crotch strap on the Seat (C) as shown below in Fig.12. Attach the Bumper Bar L (L) as per the above steps and then attach to the Bumper Bar R (M) as shown in Fig.13, pull on both sides to check securely in place.





Fig.11





Fig.10

Puggle Easy Twist 6 in 1 Trike

Fig.12

Fig.13 page 11

Assembling the Easy Twist 6 in 1 Trike



13. When using the Parent Handle (K), the Chassis (A) is fitted with dual brake pedals located on either side of the Chassis (A) as shown left.

Note: To fully engage the brake shown as shown below, push down on both the left and right brake pedals as they do not work in conjunction with each other.

Note: To disengage, using your toe push the brake up and it will click into the disengaged position and the wheels will now turn freely.



Care and Maintenance

Cleaning

- Scuff marks may be removed with a soft, damp cloth.
- DO NOT use harsh or abrasive cleaners or bleaches on this product, as they may damage the product.

Maintenance

- Periodically check all fixings to ensure they remain tight and tighten where required.
- Regularly inspect the wheels, locks, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- Store in a dry place.
- Do not leave in sunlight for prolonged periods as some colours may fade.

Troubleshooting Tips

Issue	Possible Root Cause	Solution
Joints are stiff, in particular elbow joint	Lack of lubricant	Lubricate joint as per the instructions in the maintenance section.
Parts do not click into place	Parts incorrectly or not fully adjusted/inserted.	Follow assembly/folding instructions as above closely.

For any and all other product issues not covered in the above please contact our dedicated customer services team at the below web address and they will hope to resolve any queries that you may have as soon as possible.

thenurserystore.com/contact-us

Recycling the packaging

When you've unpacked your product and have ensured that all parts are present, please discard packaging components in accordance with your local authority guidelines, for further information please check the material and your postcode at

<u>https://www.recyclenow.com/recycle-an-item</u>. Your packaging will include the following materials;

Carton – 5Ply Corrugated Paper – Widely recycled in your card and paper bin Polybag – PE Plastic – Recycle with bags at large supermarkets

WARRANTY

Thank you for purchasing your Puggle product.

At the nursery store we endeavour to provide quality, affordable products and as such we look to provide you as a proud parent with peace of mind that your Puggle product comes with a standard 12 months warranty

Your Puggle product is guaranteed for 12 months from the date of original purchase. If any defects should arise due to faulty workmanship or material, your faulty product should be returned to us and repair, replacement or refund will be at our discretion based upon thorough investigation from our QA team.

The guarantee is subject to the following provisions:

- The product must be assembled correctly and operated in accordance with the requirements contained within the instruction manual.
- The product must be solely used for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The warranty is rendered invalid if the product has been resold or has been damaged through inexpert repair.
- The warranty is only valid within the UK.

You do not need to validate your 12 month warranty, it will be effective as of initial purchase date.

For full terms and conditions please see online at, www.thenurserystore.com/warranty

thenurserystore.com

Imported by Online4baby Ltd.

Meadowbank, Tweedale Way, Oldham, OL9 8EH