

Litemax Double Pushchair

Instruction manual



**IMPORTANT! READ CAREFULLY
AND KEEP FOR FUTURE REFERENCE.**

Warning: The child's safety is your responsibility.

This product is tested and approved to
EN1888-1:2018+A1:2022

1. Welcome

Thank you for purchasing the Puggle Litemax Double Pushchair.

Please read the instructions and warnings carefully before use to ensure safe and satisfactory operation of your Puggle Litemax Double Pushchair.

If you have a query with this product or require replacement parts, please contact Online4baby online at online4baby.com/contact-us.

2. Safety instructions

IMPORTANT! READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.


- **WARNING!** Please ensure that you follow the instructions enclosed as failure to do so may result in potential injury to the child.
- **WARNING!** The child's safety is your responsibility.
- **WARNING!** Before using, remove and dispose of any plastic bags and other packaging (e.g. fasteners, fixing ties, etc.) and keep them out of reach of children.
- **WARNING!** This vehicle is intended for two children from Birth up to a weight of 15kg (each).
- **WARNING!** Never leave the child unattended.
- **WARNING!** Ensure that all locking devices are engaged before use.
- **WARNING!** To avoid injury, ensure that the child is kept away when unfolding and folding this product.
- **WARNING!** Do not let the child play with this product.
- **WARNING!** Always use the restraint system.
- **WARNING!** Always use the crotch strap in combination with the waist belt section of the harness.
- **WARNING!** Check that the stroller body is correctly engaged before use.
- **WARNING!** This product is not suitable for running or skating.
- **WARNING!** Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
- **WARNING!** Never lift the stroller with the child in it.
- **WARNING!** For a newborn baby, the seat unit should be in the most reclined position.
- **WARNING!** Check that the seat unit is correctly engaged before use.
- **WARNING!** Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.
- A basket is provided under each seat unit with a capacity of 3kg evenly distributed.
- Two cup holders are provided each with a weight capacity of 0.5kg.
- There are two storage pockets on the back of the canopies each with a weight capacity of 0.5kg.
- Do not let children play with or hang on the stroller.
- Do not overload this stroller with additional children, goods or accessories.
- Bags and other items should not be hung from the handle as this can affect the stability of the stroller.

2. Safety instructions


- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this stroller.
- Do not use parts or accessories which are not approved by the manufacturer.
- Always apply the parking brake when the stroller is stationary.
- Ensure the parking brake is engaged during the placing and removing of children.
- Do not allow the child to climb into or out of the stroller alone.
- DO NOT use if any part is broken, torn or missing. Check before assembly that all parts are present and have not been damaged in transit. Should any part be broken and/or damaged, do not use and keep out of reach of children.
- Be careful when going up or down kerbs.
- Remove the child and fold the stroller when going up or down escalators.
- If your stroller is used by someone unfamiliar with it e.g. Grandparents, always show them how it works.
- Do not use this stroller near an open fire or exposed flame.
- Take care in windy conditions.
- Do not place anything on top of a raincover.
- To prevent the child overheating, always fold or remove a raincover, hood and apron when indoors or in warm environments.
- This product conforms to EN 1888-1: 2018+A1: 2022.

3. Parts List - Stroller

A

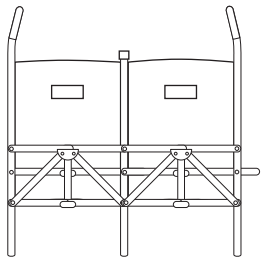


B

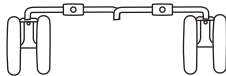

C




D

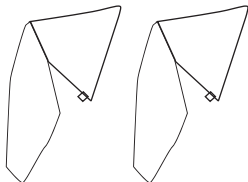

E



F

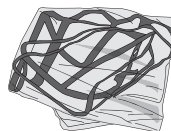

Contained in your carton are:

N°	Part	Qty
A	Stroller	1
B	Rear wheels with axle	1
C	Front wheels	2
D	Canopies	2
E	Cup holders	2
F	Raincover	1



4. Assembly

4.1. STROLLER ASSEMBLY

Release the stroller (A) from the locked position by lifting the locking latch from over the locking rivet on the stroller frame.

Hold the stroller frame (A) by the handles and press down on levers 1 and 2 with your foot whilst simultaneously lifting the handles upwards to open the frame until you hear a 'click', the stroller will then be fully open and secure.


HINT. You may have to squeeze the stroller legs and handles together first so as to release the tension on the rivet.

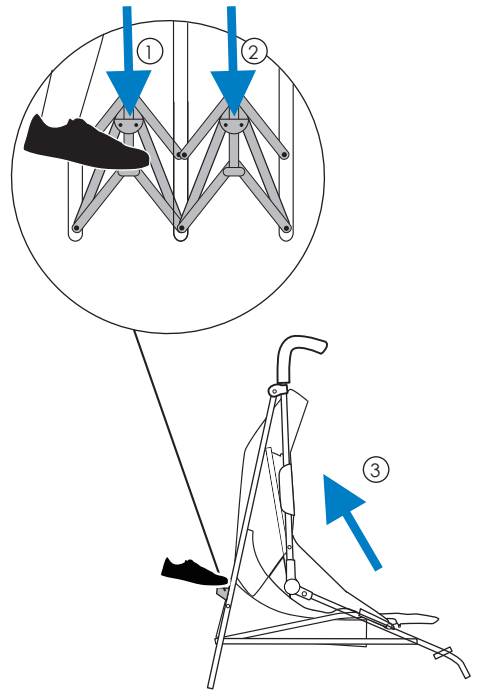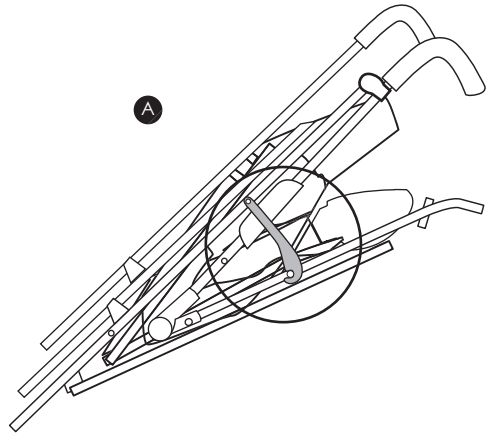


4. Assembly

4.2. REAR WHEEL ASSEMBLY

Attach the rear wheel axle (B) to the rear of the chassis. Push axle onto the frame until you hear a 'click'.

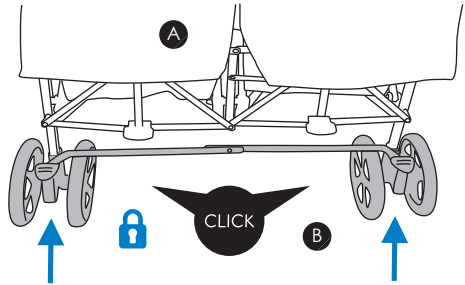


To release, push in the metal pin located at the connection point to the front of the wheel and pull wheel from the frame.

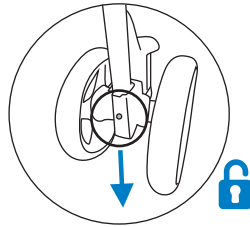


4.3. FRONT WHEEL ASSEMBLY

Insert each front wheel (C) into each front leg tube. A "click" will be heard indicating that it is locked correctly into position. Give each wheel a tug to ensure they are securely attached.

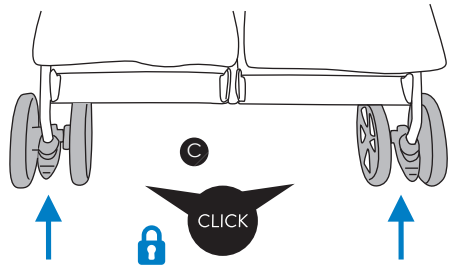



To release, push in the metal pin located at the connection point to the back of the wheel and pull wheel from the frame.

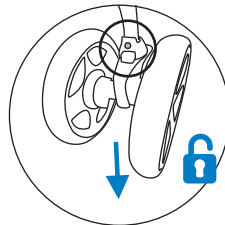

5. Canopy Assembly

5.1. CONNECT THE CANOPY

To attach the canopy (D) line up the connection points with the canopy housing points on the frame. Press down until firmly attached. Fasten all press studs around the canopy to secure the fabric.

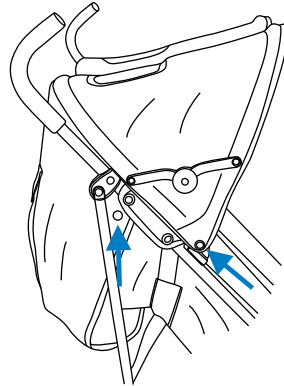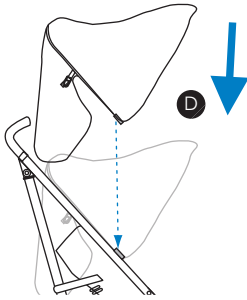


6. Cup Holder Assembly

6.1. CONNECT THE CUP HOLDER

To attach the cup holder (E), slot the cup holder connection in a downwards motion onto the cup holder housing on the stroller frame.

Repeat on the other side of the stroller.

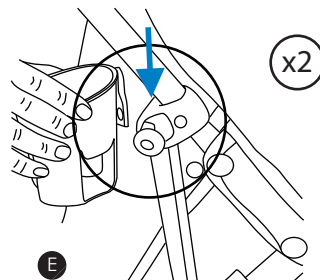


7. Swivel Wheels


7.1. Swivel Wheels

When travelling along straight surfaces or uneven terrain, the front wheels may spin.

To lock the front wheels, push down the lever located at the front of the wheels.

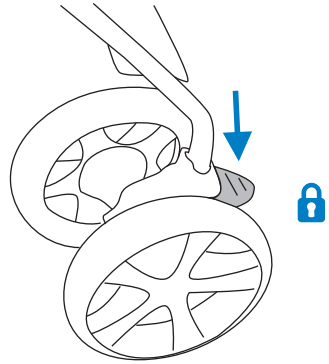

To go back to 360° swivel mode, push lever upwards.

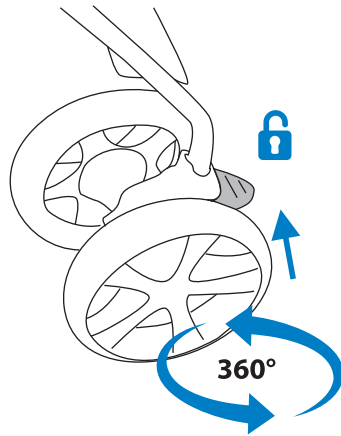

8. Brakes

8.1. ENGAGE BRAKES

Press down on either brake pedal to engage the brake. Listen for the "click" signalling that the brake is locked.




WARNING!

Always engage wheel brakes when the stroller is not moving.




WARNING!

Never press onto the bar connecting the brake pedals.

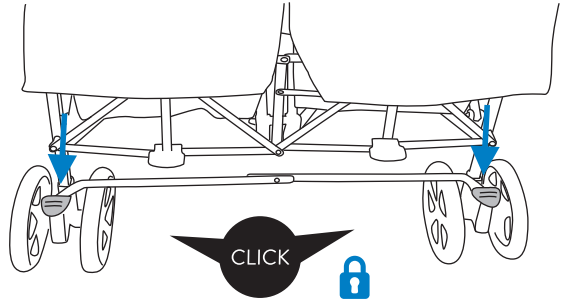

12.2. DISENGAGE BRAKES

Push the brake pedal upwards to disengage the brake.


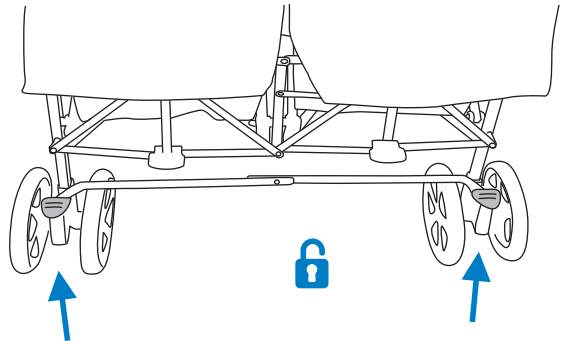


9. Canopy Adjustment

9.1. EXTENDING THE CANOPY

The canopy can be opened or closed by lowering or raising the canopy hinge.

To close canopy push the canopy hinge upwards.

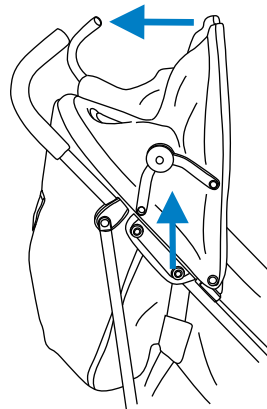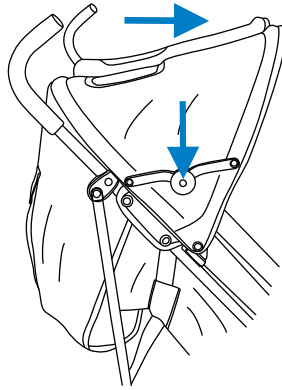

10. Backrest Adjustment



10.1. ADJUST BACKREST

Locate the backrest adjustment mechanism at the rear of the seat. Squeeze the adjustment clip and slide the backrest up or down to your chosen position, then release the clip to fix seat into place.



WARNING!

Ensure the backrest is positioned to the lowest most reclined position for newborn babies.

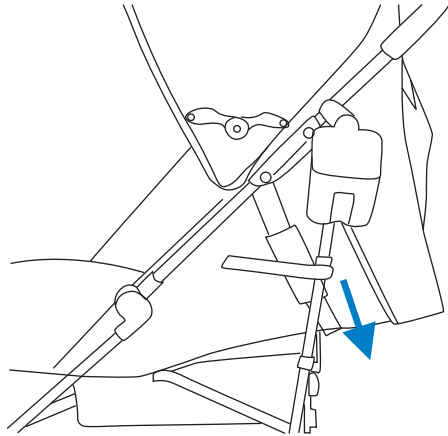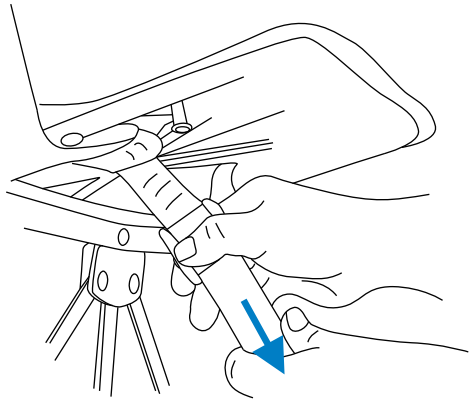


11. Harness Adjustment

11.1. HARNESS ADJUSTMENT

To fasten the harness, push the prongs into the buckle housing. Listen for the 'click'


WARNING!

Always adjust the harness to fit your child correctly for their comfort and safety. A loose fitting harness can be very dangerous.

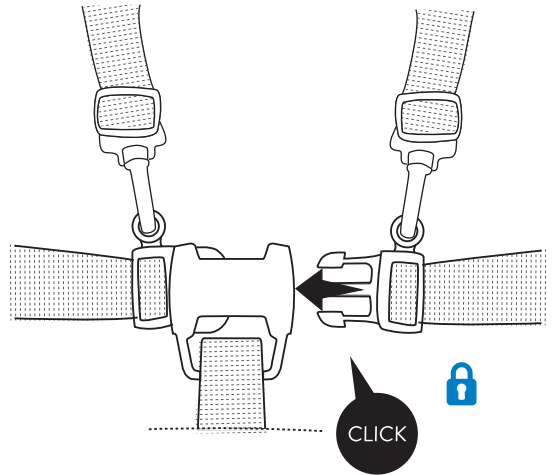

11.2. RELEASE HARNESS


To release, push the prongs and remove from the buckle.

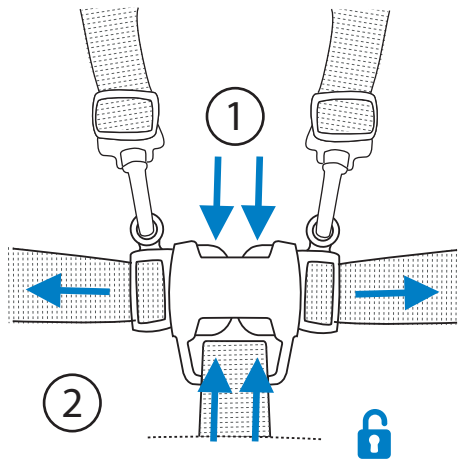


11. Harness Adjustment

11.3. SHOULDER & CROTCH STRAP ADJUSTMENT

To adjust the harness, move the sliders as shown.

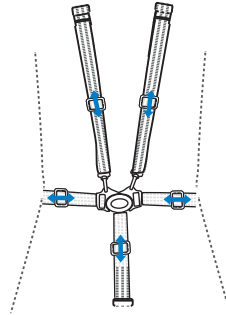


The stroller has 2 shoulder height positions. Slots 'a' for smaller children and slots 'b' for older children.


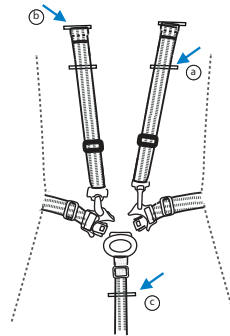


WARNING!

Always adjust the shoulder strap height according to baby height and ensure that both straps are at the same height.

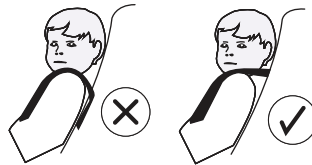

The stroller has 2 crotch strap positions. Slot 'c' is for smaller children. Both the crotch strap and crotch pad should be passed through slot 'c' when used for children from birth to 6 months.

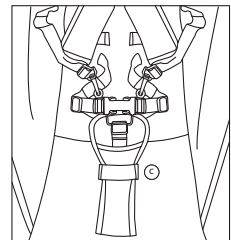
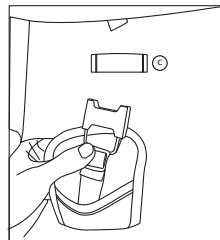


12. Calf Rest Adjustment

12.1. CALF REST

Squeeze the adjustment buttons on either side of the calf rest and adjust to preferred position.

To note, the adjuster buttons are within the calf rest fabric cover.



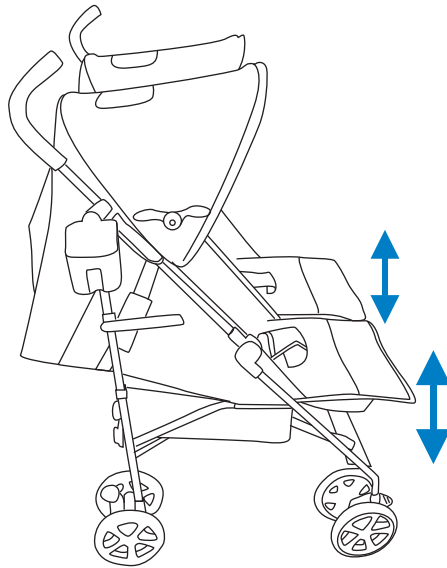
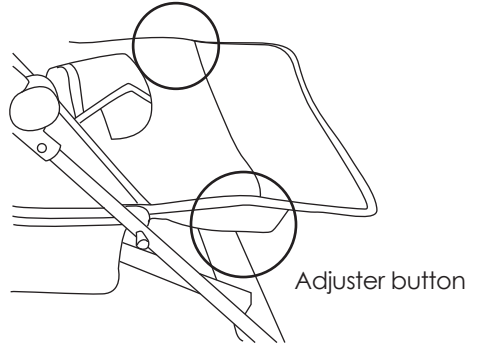


13. Folding

13.1. FOLDING

Push the frame levers upwards to fold the frame.


Push the handles forwards and downwards to fold the frame. Push frame together and ensure the locking latch has automatically locked before lifting the stroller.

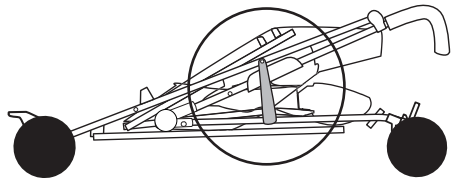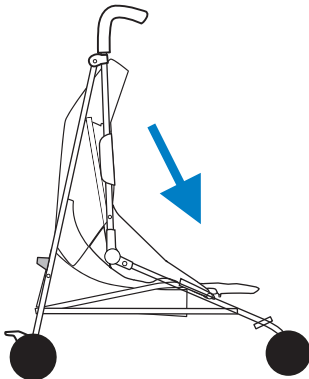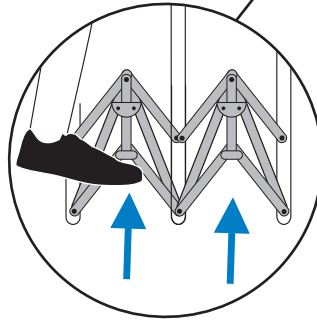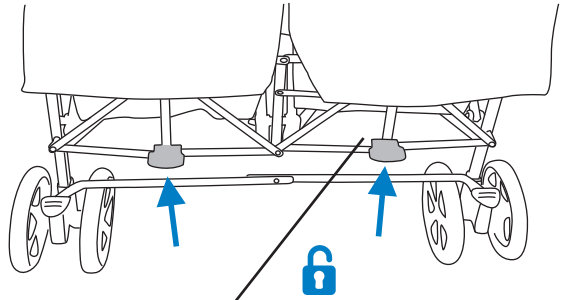

14. Raincover

14.1 RAINCOVER

Locate the raincover (F). Pull the raincover down over the pram starting at the top of the canopy and pulling down towards the footrest. Connect fasteners around the chassis to secure.

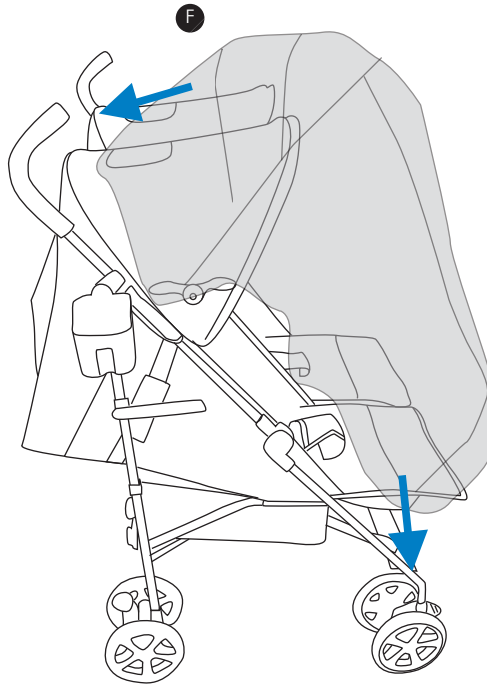

15. Care and Maintenance

15.1. CLEANING

- Spot or sponge clean fabrics with mild detergent. Use mild soap or upholstery shampoo. NEVER use bleach. Dry in shade thoroughly before reuse and avoid direct heat and sunlight. Do not iron. Do not dry clean. Do not bleach.
- Wipe clean plastics and metals with a damp cloth.
- Never clean any part of the product with abrasive, ammonia based, bleach based or spirit type cleaners.
- Ensure the product is fully dry before use or storage.
- Always ensure the product is stored in a dry place to prevent mold or mildew developing.

15.2. MAINTENANCE

- The product requires regular maintenance to ensure correct and safe performance.
- Regularly inspect the wheels, locks, brakes, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Regularly check and lubricate the wheels.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- Always check your stroller for loose screws, ensure they are tightened properly.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- Store in a dry place.
- Do not leave in sunlight for prolonged periods as some fabrics may fade.



If you have any questions or concerns regarding this product,
do not hesitate to contact our expert team online
via online4baby.com/contact-us

Feeling social?  
online4baby.com

Imported by Online4baby Ltd,
Meadowbank, Tweedale Way, Oldham, OL9 8EH