



PUGGLE

Designer Spin 6 in 1 Trike

Instruction manual

Welcome!

Thank you for purchasing the Puggle Designer Spin 6 in 1 Trike.

This instruction manual will guide you through the setup, use, and maintenance of your new trike, ensuring you get the most out of its versatile features. Please read through the following information and safety warnings carefully to fully understand and enjoy all the benefits your 6 in 1 Trike has to offer, and to ensure its safe operation.

We're here to help!

If you have a query with this product or require replacement parts, please contact us at the email address below.

thenurserystore.com/contact-us


Follow us on social media:

 Facebook

 Instagram

 YouTube

 TikTok

 X (formerly known as Twitter)

 Pinterest

Important Information




IMPORTANT! Your 6 in 1 Trike may differ slightly from images shown above and throughout, as the images used are for illustration purposes only.

Your 6 in 1 Trike is tested to comply with EN 71.

- Bags and other items should not be hung from the handles as this can affect the stability of the product.
- DO NOT use parts or accessories which are not approved or supplied by the manufacturer.
- DO NOT allow your child to play with this product without adult supervision.
- Ensure that the bag is emptied and any accessories are removed prior to folding.
- A bag is provided for the carriage of items evenly distributed upto a maximum of kg.
- Overloading, incorrect folding and the use of non-approved accessories is unsafe and may damage or break this product.
- If a raincover is supplied, do not leave the raincover on indoors, in a hot atmosphere or near a heat source as your child may overheat.
- To prevent damage, remove the raincover before folding.
- Do not place anything on top of the raincover.




Safety Instructions

IMPORTANT – Read the instructions carefully before use and keep for future reference.

- **WARNING:** A child's safety is your responsibility.
- **WARNING:** Adult assembly is required.
- **WARNING:** Ensure that all components are fitted securely into place and tightened where applicable before allowing your child to play with the 6 in 1 trike.
- **WARNING:** Ensure that the child is supervised by an adult when using the 6 in 1 trike at all times, and is taught about the correct usage of the product.
- **WARNING:** Ensure that all locking devices are engaged before usage.
- **WARNING:** This product is suitable for use by one child at a time only.
- **WARNING:** DO NOT overload this product, maximum capacity is 25kg.
- Approximate age range is 9 months to 5 years.
- **WARNING:** Keep hands and other limbs away from moving parts such as the wheel to prevent entrapment and injury.
- **WARNING:** Protective equipment should be worn. Children should wear approved protective equipment e.g. helmet and correct fitting is required.
- **WARNING:** DO NOT allow a child to ride on roadways, public highways or alleys. Not to be used in traffic.
- **WARNING:** DO NOT allow a child to ride on steeply sloped areas, near steps, swimming pools, or other bodies of water.
- For use on smooth, paved surfaces only.
- Ensure that the rider keeps both hands on the handlebar at all time for proper control.
- **WARNING:** DO NOT allow a child to ride the product at dusk, at night or at times of limited visibility.
- Children should be reminded that the toy should be used with caution, since it requires skill, so as to avoid falls or collision causing injury to the user and third parties. They should also be reminded of the dangers of using this product on public highways.
- All assembly fittings should always be tightened properly, checked periodically and the care should be taken that no bolts are loose, because a child could trap parts of the body or clothing (e.g. strings, necklaces, ribbons for babies' dummies), which could pose a risk of suffocation and strangulation.
- Replace broken or worn parts immediately, only use parts supplied or approved by the manufacturer.
- This 6 in 1 Trike conforms to BS EN 71. 

Symbols and their meaning

There are a number of symbols used through this manual, please find below breakdown of what each symbol is and what it means.

	European conformity – This mark is applied to both physical product and product packaging, indicating conformity with the relevant European testing standards.
	UK Conformity Assessed – This mark is applied to both physical product and product packaging, indicating conformity with the relevant UKSI testing standards.
	Direction indicator showing direction of assembly, rotation, function.

What's in the box

x1 Puggle Designer Spin 6 in 1 Trike

x1 Instruction Manual

Before Assembly

Before assembly, please ensure that you have read and understood the instructions. Then carefully unpack your Designer Spin 6 in 1 Trike and ensure that all parts are present, please see parts list as follows.

Discard packaging in accordance with your local authority guidelines.

The Designer Spin 6 in 1 Trike should be assembled on a clean surface, free from any sharp objects that could mark or damage the product.

CAUTION: There are many small components used in the construction of this folding travel trike. These items should be kept out of reach of young children whilst assembling the unit.

Parts List

Puggle Designer Spin 6 in 1 Trike








Parts included with your Designer Spin 6 in 1 Trike are:

Part	Description	Quantity	Part	Description	Quantity
A	Chassis/frame	1	H	Cup Holder	1
B	Handlebar	1	I	Seat Bolts	4
C	Seat	1	J	Basket	1
D	Front Wheel	1	K	Parent Handle	1
E	Rear Wheel	2	L	Bumper Bar (Left)	1
F	Bag	1	M	Bumper Bar (Right)	1
G	Canopy	1			

Assembling the Designer Spin Lite 6in1 Trike

1. Rotate the folding dial (shown below) counterclockwise and then unfold the Chassis (A) as shown in the diagram right, it will click into place.

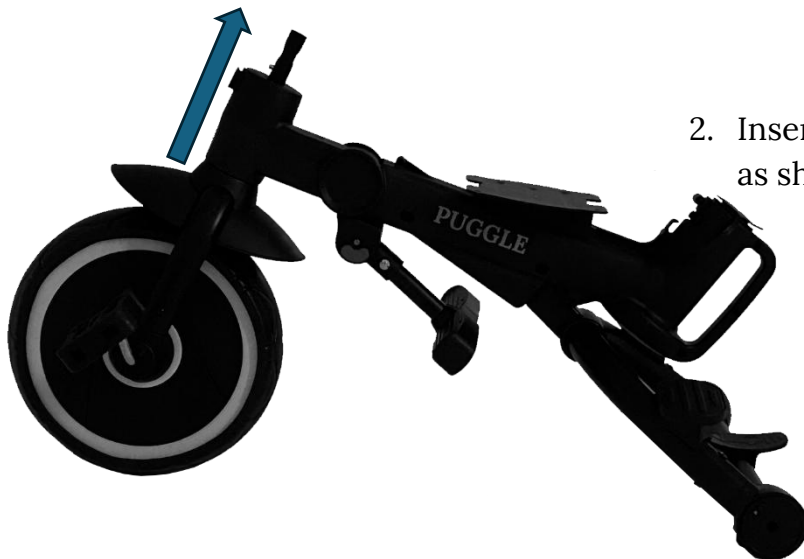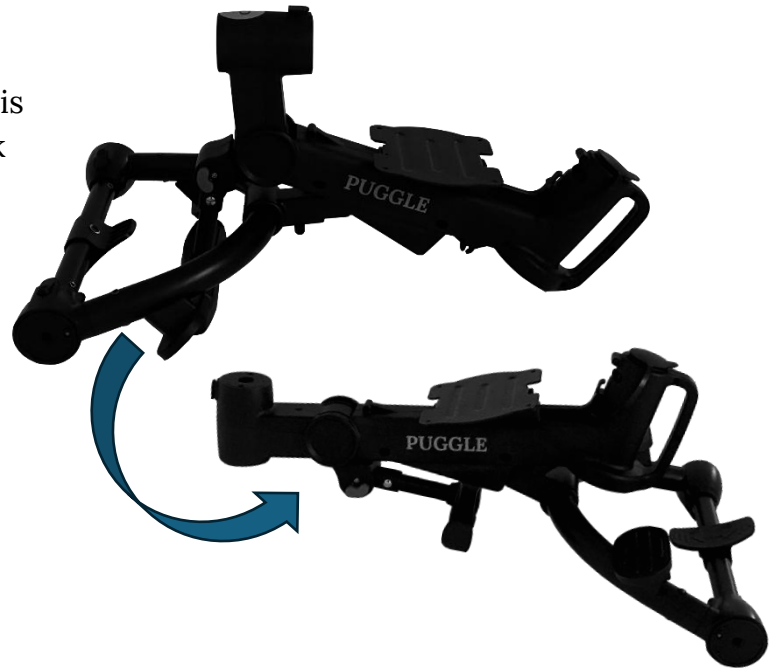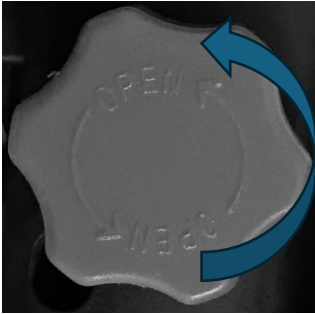

2. Insert the Front Wheel (D) into the Chassis (A) as shown in the diagram left.

3. Insert the Handlebar (B) onto the Chassis (A) until it clicks into place. Pull up on the Handlebar (B) to ensure it is securely in place.


Note: To remove Handlebar B), press the release button on the front of the Handlebar (B) and then pull up to remove.



Assembling the Designer Spin 6in1 Trike



4. Insert both of the Rear Wheels (E) into the corresponding slots on the Chassis (A) as shown right, they will click into place. Gently pull the Rear Wheel (E) to ensure that it is securely in place.

Note: To remove the Rear Wheels (E), press the release catch (image shown below) on the Chassis (A) and pull the Rear Wheel (E) away from the Chassis (A).

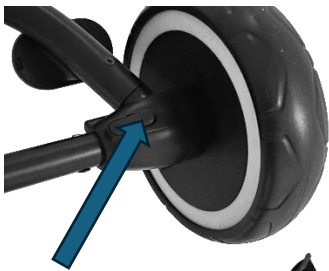


5. Sit the Seat (C) onto the mounting bracket on the Chassis (A) as shown left and then attach to the Chassis (A) using the Seat Bolts (I) as shown below. Pull the Seat (C) upwards to ensure that it is securely in place.

Note: To adjust the direction of the seat, simply press the rotation lever on the underside of the Seat (C) and then rotate into the desired position. The Seat (C) will click to indicate securely in place.

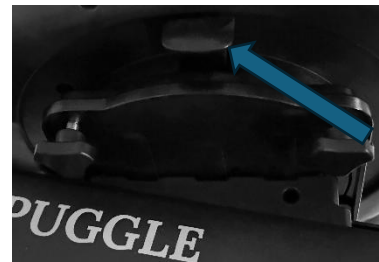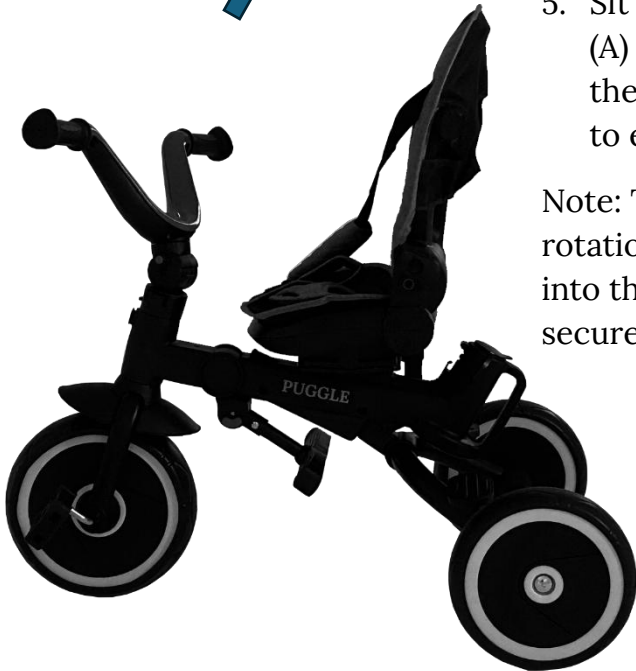

6. To adjust the backrest position of the Seat (C), lift the handle on the rear of the Seat (C) as shown left. There are 2 adjustable backrest positions, it will click to confirm in place. The Seat (C) can be fully folded forwards for storing.

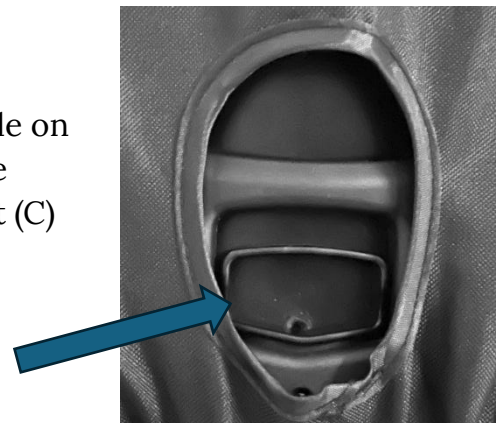

Assembling the Designer Spin 6in1 Trike

7. Attach the Canopy (K) to the Seat (C) as shown left by slotting the Canopy (K) into the corresponding slots on the Seat (C), it will click into place. Gently pull on the Canopy (K) to ensure it is securely in place.



8. Unfold the Canopy (K) as far as possible, however the fabric will not be taught as shown below in Fig. 1. To tighten locate the inner ribs of the Canopy (K) Fig. 3 and push the outwardly facing ribs on either side and it will click into place. The Canopy (K) should now be fully extended and taught as per Fig. 3

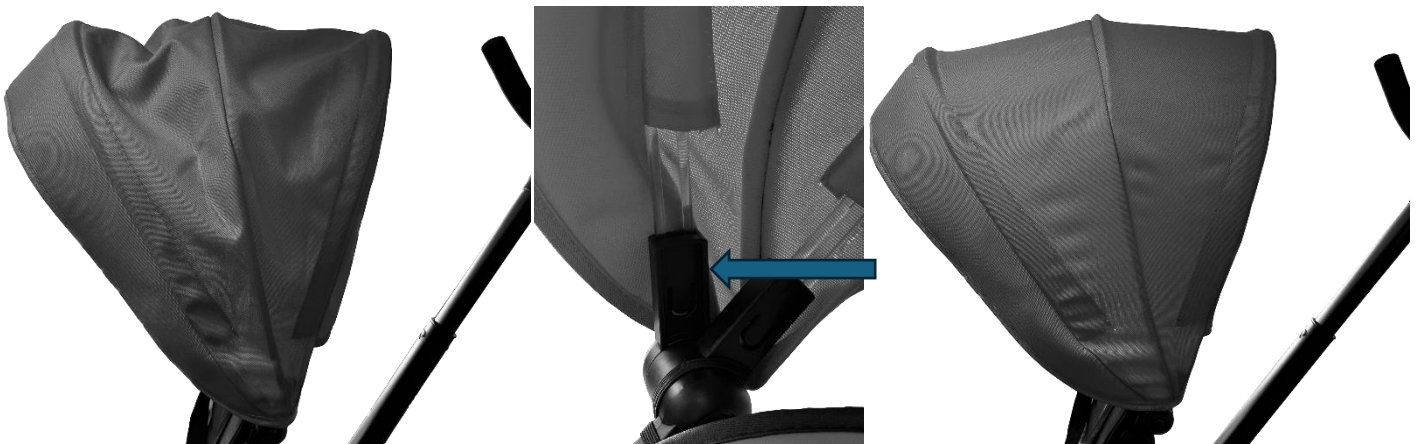


Fig.1

Fig.2

Fig. 3

Assembling the Designer Spin 6in1 Trike

9. Attach the Bumper Bar (Left) (L) to the Seat (C) as shown in the diagram left. It will click into place and the release catch will pop out.

Note: To remove simply press the release catch and pull the Bumper Bar (Left) (L) away from the housing.



10. Repeat the previous step with the Bumper Bar (Right) (M) and then feed the Bumper Bar (Right) (M) through the crotch pad on the Seat (C). Join both the Bumper Bar (Left) (L) and the Bumper Bar (Right) (M) together as shown right. It will click into place, gently pull on the 2 halves to ensure securely in place.



Note: To remove simply press the central release catch and then follow steps 8 and 9 in reverse order.

11. Attach the Basket (J) to the Chassis (A) by aligning the catch on the Basket (J) with the corresponding cutout on the Chassis (A) shown left. Rotate the catch clockwise 90° to secure the Basket (J) in place as shown below, gently pull on the basket to ensure securely in place.



Assembling the Designer Spin 6in1 Trike

12. Attach the Parent Handle (K), slotting into the mount on the rear of the Chassis (A) as shown below. It will click into place to indicate the spring pin is in place. Gently pull up on the Parent Handle (K) to ensure it is securely in place.

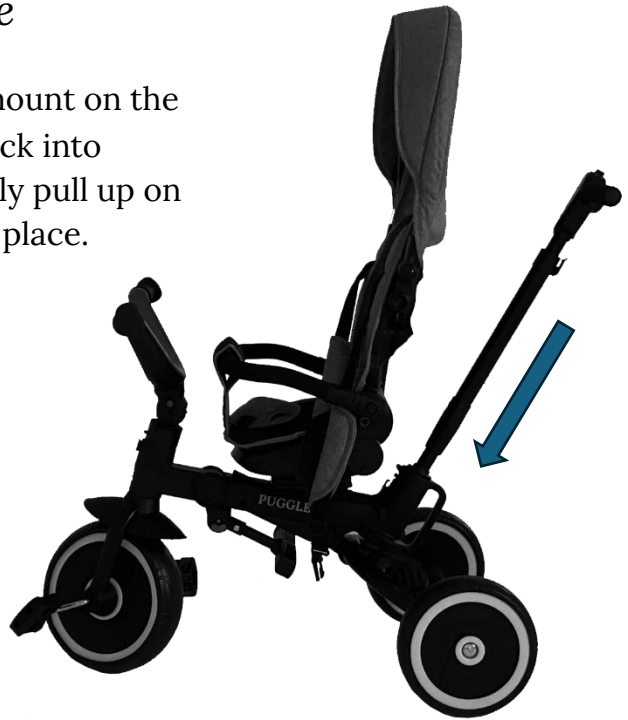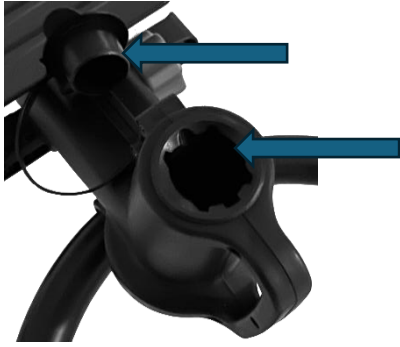

13. Adjust the Parent Handle (K) to your desired height. The Parent Handle (K) has 3 variable height positions, to adjust the height simply press button on the top of the Parent Handle (K) as indicated left and move up or down until the spring pin locks into place.

14. Attach the Bag (F) to the Parent Handle (K), hang the loop over the tab on the handle and then attach the Velcro tab around the Parent Handle (K). The Bag (F) has a zip compartment and a front pouch to store belongings whilst the trike is in use.




Assembling the Designer Spin 6in1 Trike

15. Attach the Basket (J) to the Chassis, by slotting onto the mount on the front of the Chassis (A) as shown right.



16. Attach the Cup Holder (H) to the Parent Handle (K) as per the previous step.

17. When using the Parent handle (K), the child can either pedal or use the footrest to unfold the footrest as shown left, simply press the release button shown below and then unfold until clicked into place.

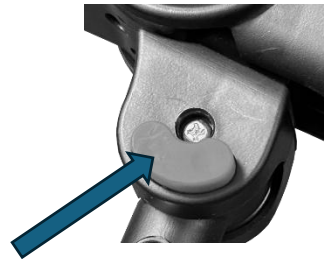


18. When using the Parent Handle (N), the Chassis (A) is fitted with a single central brake pedals located on the Chassis (A) as shown left.

Note: To fully engage the brake, push down on the brake pedal.

Note: To disengage, using your toe push the brake up and it will click into the disengaged position and the wheels will now turn freely.

19. The Chassis (A) also features a rear footrest for a second child to stand on whilst in use, the maximum capacity for this is 25kg.

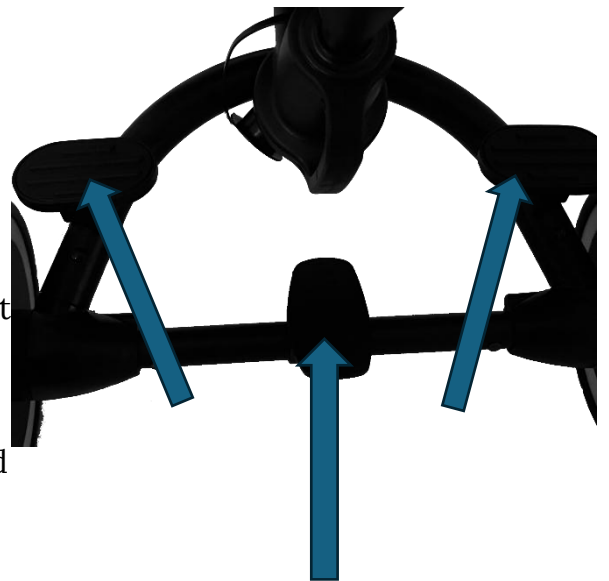

Folding the Designer Spin 6 in 1 Trike

When not in use it is recommended to fold your trike away before storing. To fold, press the fold button on the Handlebar (B) Fig. 4 and then fold the handlebar forwards as shown in Fig. 5. Remove both the Bumper Bar Left (L) and Bumper Bar Right (M) from the Seat (C) as shown in Fig. 6. Fold the Seat (C) forwards, using the backrest adjustment handle as shown in Fig. 7 and then remove the Parent Handle (K) replacing the mount cover on the Chassis as shown in Fig. 8. Rotate the fold dial on the Chassis (A) and fold the rear of the chassis inwards, in the reverse of assembly Step 1 as shown in Fig. 9. Press the button on the side of the Handlebar (B) as shown below, fold the Handlebar (B) forwards to complete the folding and store away in a cool, dry place.

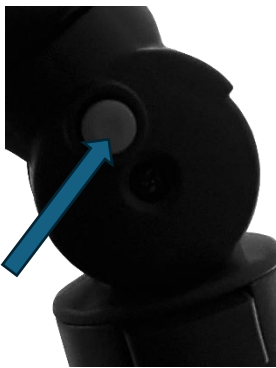


Fig.4



Fig.5

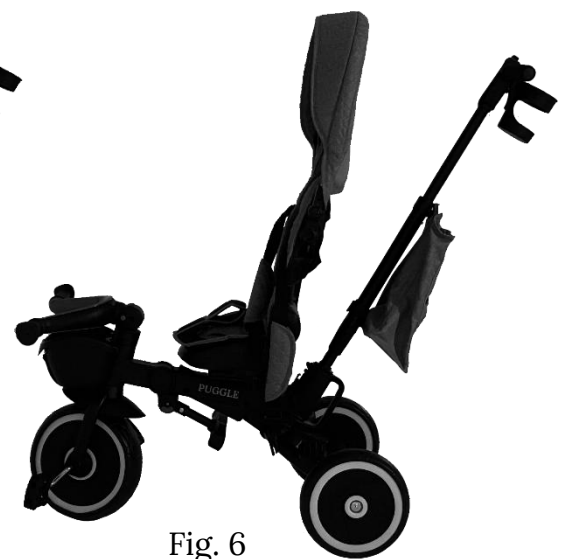


Fig. 6



Fig.7



Fig.8



Fig.9

Care and Maintenance

Cleaning

- Scuff marks may be removed with a soft, damp cloth.
- DO NOT use harsh or abrasive cleaners or bleaches on this product, as they may damage the product.

Maintenance

- Periodically check all fixings to ensure they remain tight and tighten where required.
- Regularly inspect the wheels, locks, harness, catches, seat adjusters, joints and fixings to ensure they are clean, operating correctly and in full working order.
- Do not use this product if any part is broken, torn or missing and use only spares provided by the manufacturer.
- If parts become stiff or difficult to operate, ensure dirt is not the cause, then try a light application of a silicon lubricant, ensuring it penetrates between the components. Regular lubrication of moving parts will extend the life of your product and make opening and folding easier.
- After exposure to damp conditions, dry off with a soft cloth and leave fully open in a warm environment. Storing damp will encourage mildew to form.
- Store in a dry place.
- Do not leave in sunlight for prolonged periods as some colours may fade.

Troubleshooting Tips

Issue	Possible Root Cause	Solution
Joints are stiff, in particular elbow joint	Lack of lubricant	Lubricate joint as per the instructions in the maintenance section.
Parts do not click into place	Parts incorrectly or not fully adjusted/inserted.	Follow assembly/folding instructions as above closely.

For any and all other product issues not covered in the above please contact our dedicated customer services team at the below web address and they will hope to resolve any queries that you may have as soon as possible.

thenurserystore.com/contact-us

Recycling the packaging

When you've unpacked your product and have ensured that all parts are present, please discard packaging components in accordance with your local authority guidelines, for further information please check the material and your postcode at <https://www.recyclenow.com/recycle-an-item>. Your packaging will include the following materials;

Carton – 5Ply Corrugated Paper – Widely recycled in your card and paper bin

Polybag – PE Plastic – Recycle with bags at large supermarkets

WARRANTY

Thank you for purchasing your Puggle product.

At the nursery store we endeavour to provide quality, affordable products and as such we look to provide you as a proud parent with peace of mind that your Puggle product comes with a standard 12 months warranty

Your Puggle product is guaranteed for 12 months from the date of original purchase. If any defects should arise due to faulty workmanship or material, your faulty product should be returned to us and repair, replacement or refund will be at our discretion based upon thorough investigation from our QA team.

The guarantee is subject to the following provisions:

- The product must be assembled correctly and operated in accordance with the requirements contained within the instruction manual.
- The product must be solely used for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The warranty is rendered invalid if the product has been resold or has been damaged through inexpert repair.
- The warranty is only valid within the UK.

You do not need to validate your 12 month warranty, it will be effective as of initial purchase date.

For full terms and conditions please see online at,
www.thenurserystore.com/s/12-month-product-warranty-registration

PUGGLE

thenurserystore.com

Imported by Online4baby Ltd.

Meadowbank, Tweedale Way, Oldham, OL9 8EH